

# INTERNATIONAL POINT OF SALE

## HP Imaging Barcode Scanner




The HP Imaging Barcode scanner is compatible with CornerStore and any non-wireless computer. This document will show you how to program your scanner to read barcodes the way they are formatted in your Corner Store POS database.

## International Point of Sale: Corner Store POS

This barcode is to **reset** your barcode scanner to default settings

Standard Default

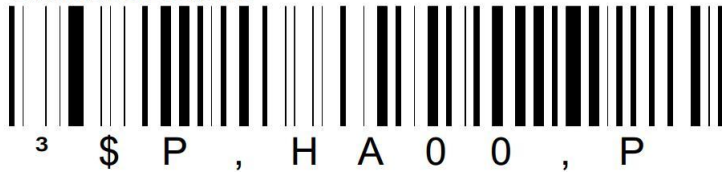


Carriage Return (simulates Enter key) - Use this when you scan a barcode and have to press enter to get the item # onto the invoice grid


Suffix of CR




If you want your scanner to operate in Stand Mode scan these barcodes in the following order

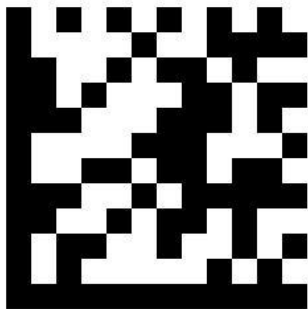

1

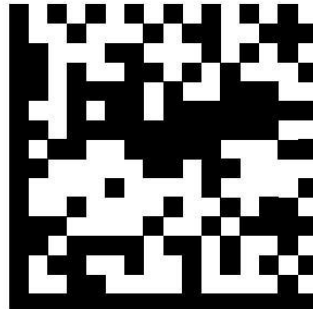

2

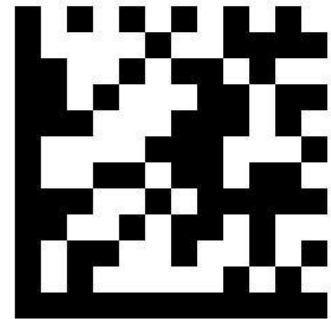


3

Scan these in the numbered order to get the settings you'd want


## UPCA

### Drop first digit


1

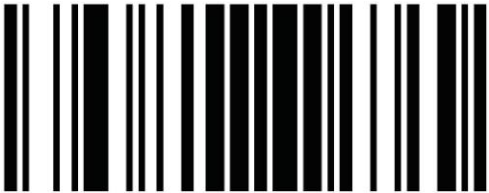

2

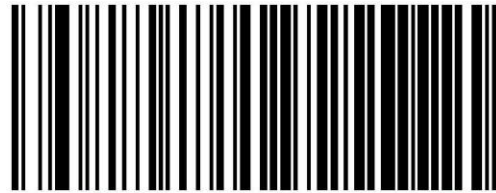


3

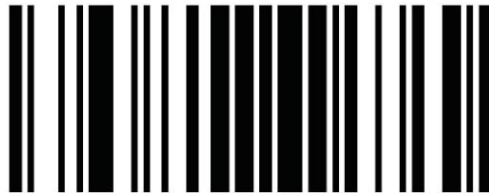


### Keep first digit

1

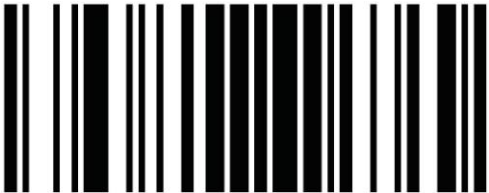



2

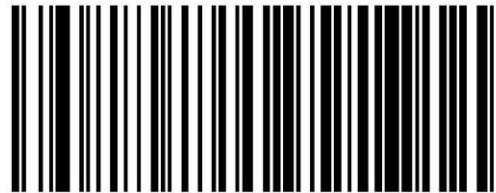

3



### Drop last digit

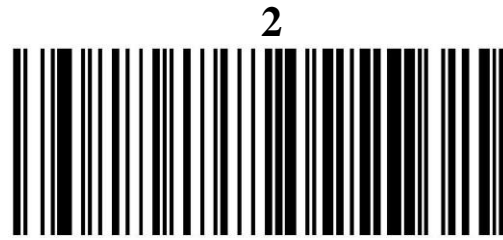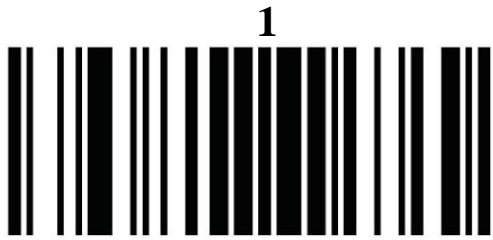


### Keep last digit




# UPCE

## Drop first digit

1

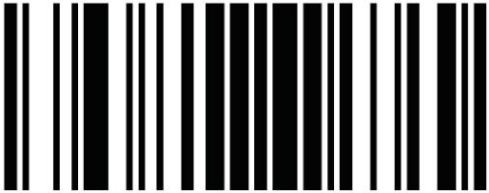

2

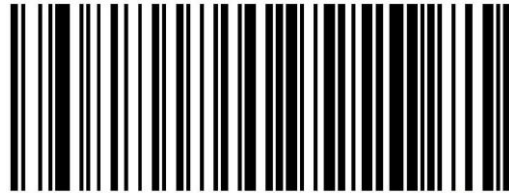


3



## Keep first digit


1

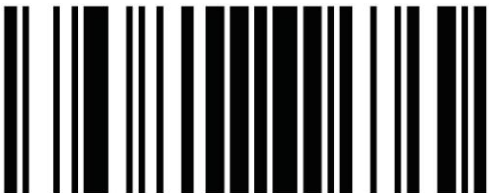



2



3

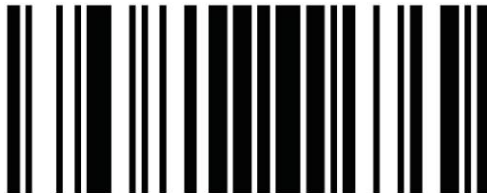

### Drop last digit

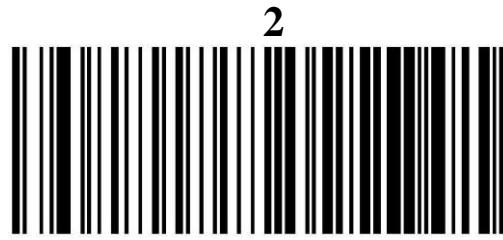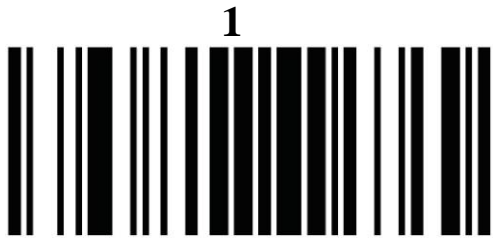

### Keep last digit

