

INTERNATIONAL POINT OF SALE

HP Linear Scanner With Stand




The HP Linear Barcode scanner is compatible with CornerStore and any non-wireless computer. This document will show you how to program your scanner to read barcodes the way they are formatted in your Corner Store POS database.

International Point of Sale: Corner Store POS


This barcode is to **reset** your barcode scanner to default settings

Standard Default

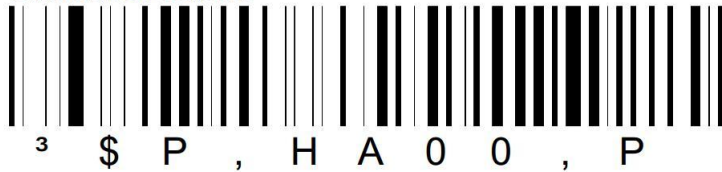


Carriage Return (simulates Enter key) - Use this when you scan a barcode and have to press enter to get the item # onto the invoice grid

Suffix of CR

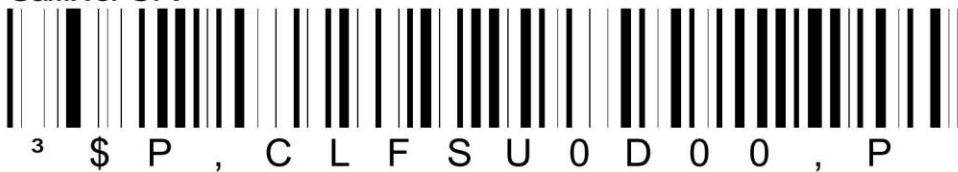


If you want your scanner to operate in Stand Mode scan these barcodes in the following order

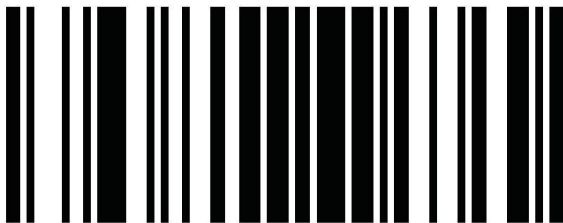

1



2

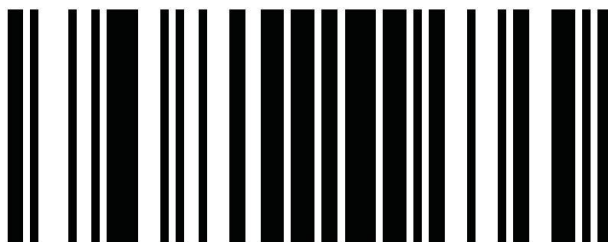


3

Scan these in the numbered order to get the settings you'd want


UPCA

Drop first digit


1

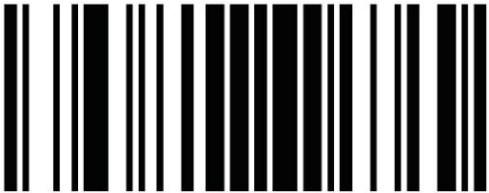

2

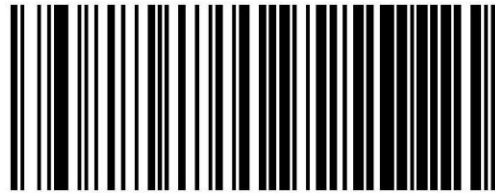


3

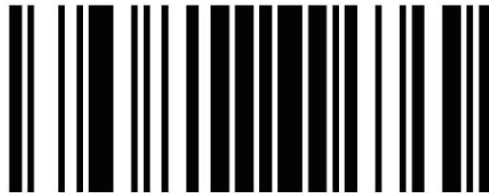


Keep first digit

1

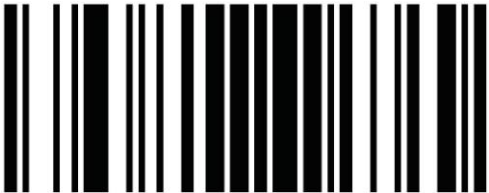


2

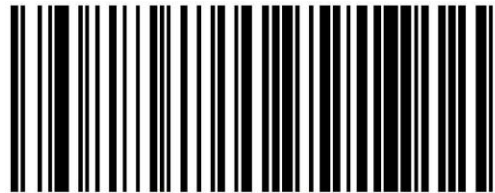

3



Drop last digit

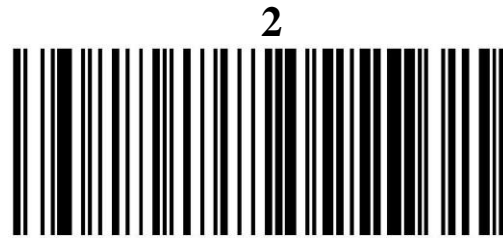


Keep last digit




UPCE

Drop first digit

1

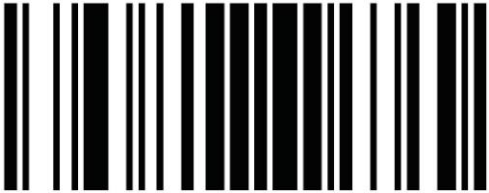

2

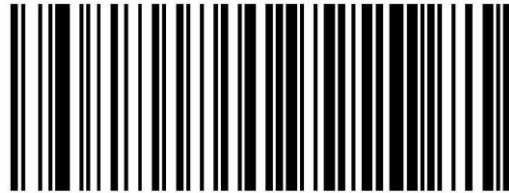


3



Keep first digit


1

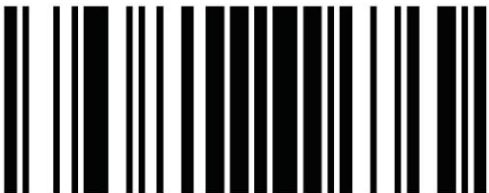



2



3

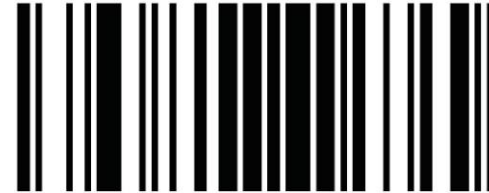

Drop last digit

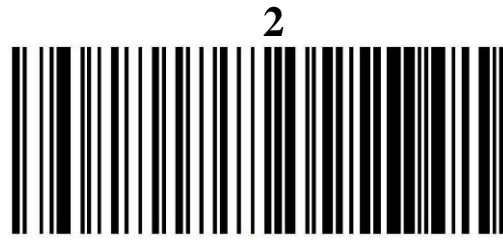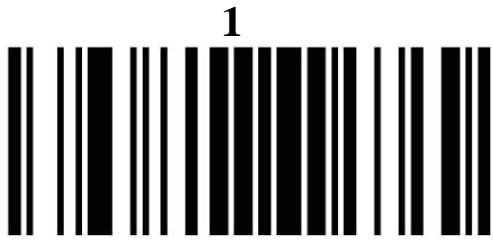

Keep last digit

