

INTERNATIONAL POINT OF SALE


HP Presentation Barcode Scanner



The HP Presentation Barcode scanner is compatible with CornerStore and any non-wireless computer. This document will show you how to program your scanner to read barcodes the way they are formatted in your Corner Store POS database.


International Point of Sale: Corner Store POS

Scan this barcode if you want your scanner to go to default settings

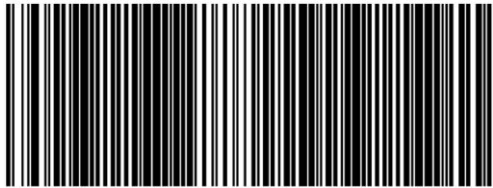


Set All Defaults

Carriage Return (simulates Enter key) - Scan these barcodes in this order for carriage return is enabled. Carriage Return will simulate the enter key to get the item # onto the invoice grid. Otherwise you'd have to press enter yourself whenever you scan an item.

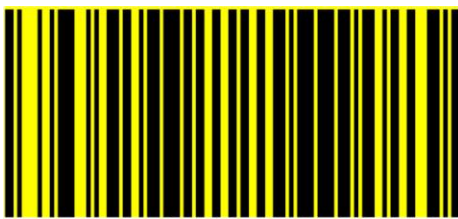


Enter Programming Mode

1

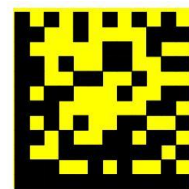

Set Global Suffix

2

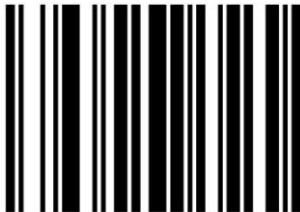

0 (zero)

3



D

4



Exit Global Suffix Mode

5



Exit Programming Mode

6

Scan these in the numbered order to get the settings you'd want


UPCA

Drop first digit

1



2

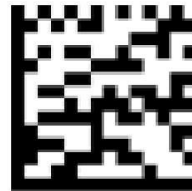

3




Keep first digit

1



2

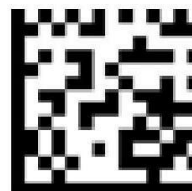


3




Drop last digit

1

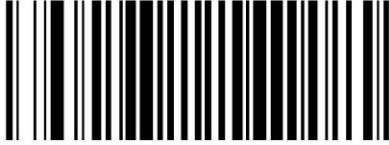

2

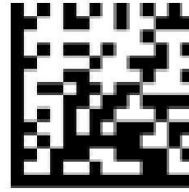

3




Keep last digit

1



2

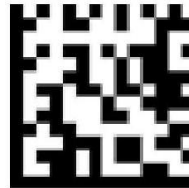

3




UPCE

Drop first digit

1



2

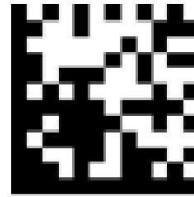

3




Keep first digit

1



2

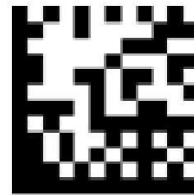

3




Drop last digit

1



2

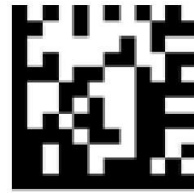

3




Keep last digit

1



2

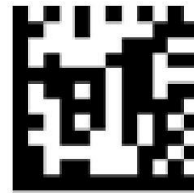

3

