

Barcode Scanning Guide for the Honeywell Orbit 7120



This guide includes all the necessary bar codes you need to scan to program your scanner correctly.

The Honeywell Orbit 7120 is a hands-free scanner. This hardware does not need drivers to install and is plug and play. Upon plugging it in you can immediately use it.

To set the scanner to factory defaults, scan the barcode below.



To make sure that you're Scanner performs a Carriage Return (Presses the Enter Key); so that it enters in all information without hitting the Enter Key, scan this barcode.



UPC – E

Enable first digit on UPC-E codes, scan this code.



Disable last digit on UPC-E codes, scan this code.



Enable last digit on UPC-E codes, scan this code.



UPC – A

Enable first digit of UPC-A codes, scan this code.



Disable first digits of UPC-A (12 character barcodes) codes, scan this barcode



Enable last digit of UPC A, scan this code.



Disable last digit of UPC A, scan this code

