

INTERNATIONAL POINT OF SALE

Installation instructions for the HP pole displays with Corner Store POS



Corner Store POS supports HP Pole Display. This document will detail the process of installing the correct drivers for HP Pole Display and then setting up in Corner Store POS.

INTERNATIONAL POINT OF SALE


Installing HP Pole Display Drivers

1. The Pole display driver for HP can be downloaded at:

For Windows XP/Vista/7/8


<http://www.cornerstorepos.com/downloads/hardware/sp50916>

2. After downloading the driver extract and run the installer.
3. Select next.

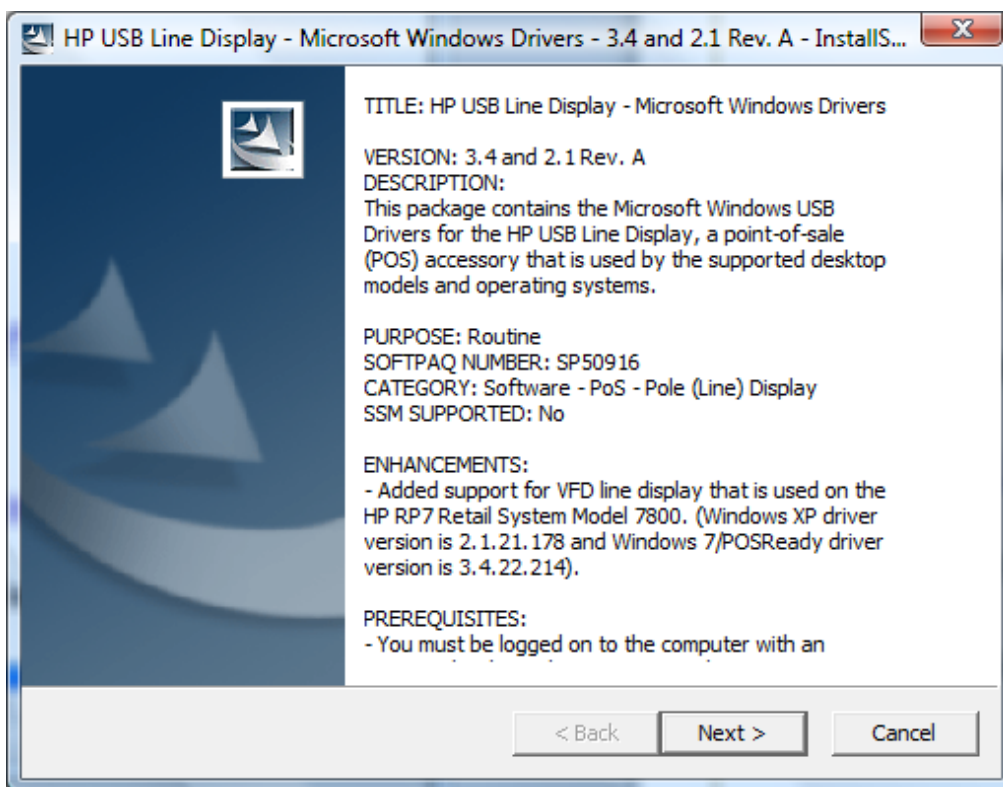


INTERNATIONAL POINT OF SALE

4. Select “I accept the term in the licence agreement” and click Next.

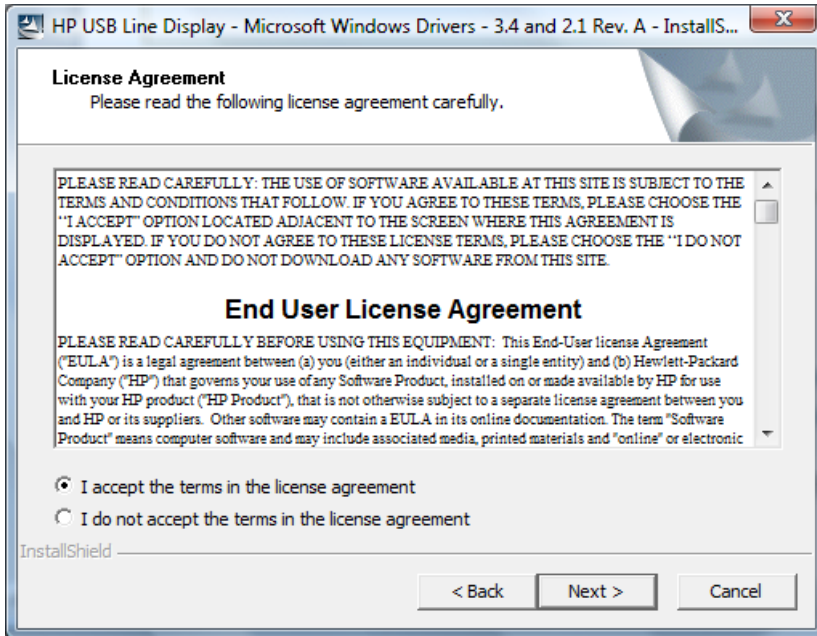


5. Select the location to save the install files and select **Next**.

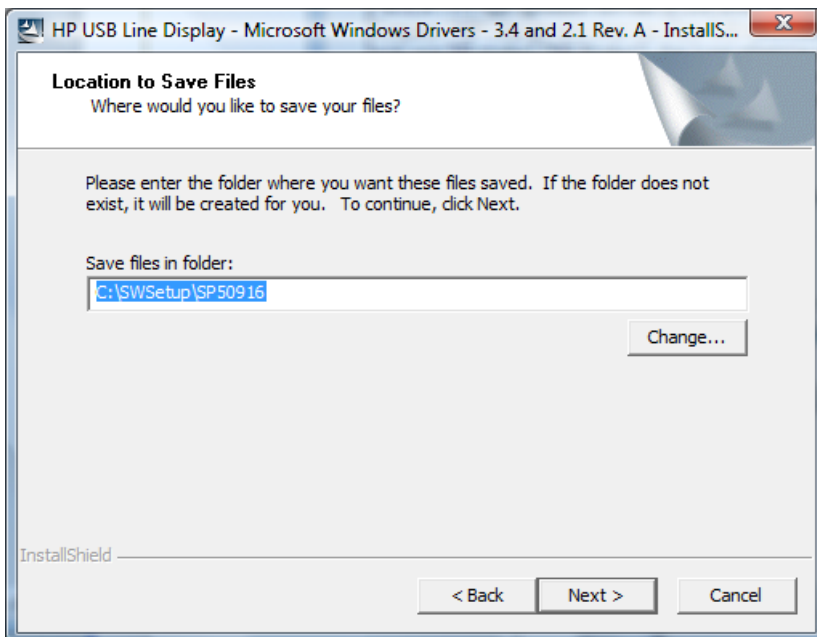


INTERNATIONAL POINT OF SALE

6. Select **Next** to begin the Hp Pole Display driver
7. Select **Next**

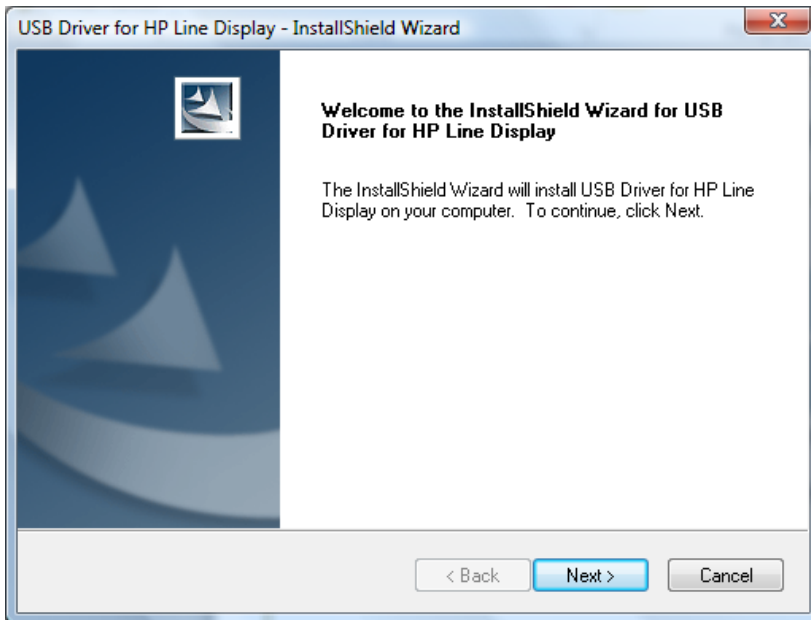


8. Select **Install** Usb Driver for Hp Pole display

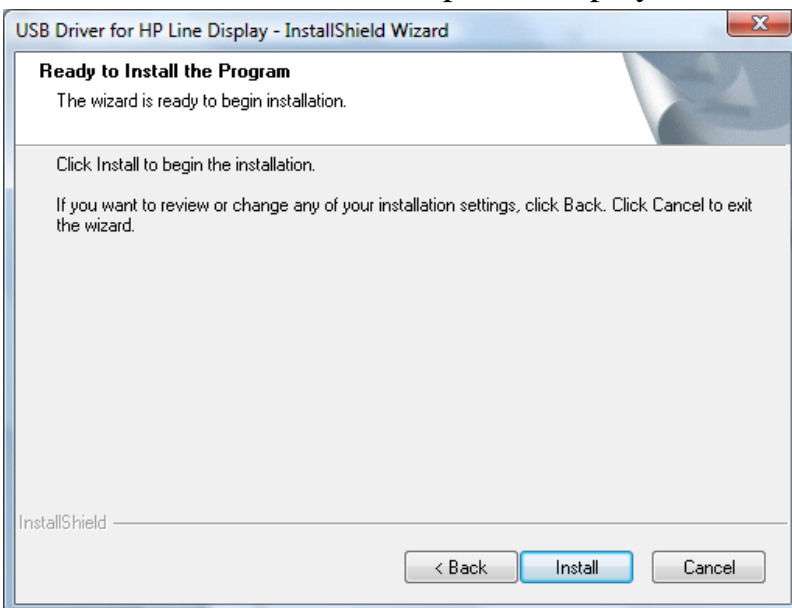


INTERNATIONAL POINT OF SALE

1. Open CornerStore POS>Setup>Hardware Setup

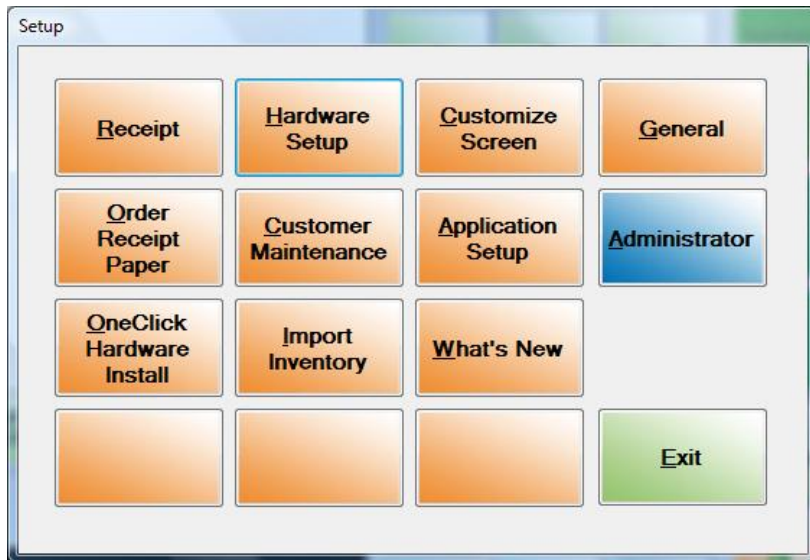

2. Within **Hardware Setup** select **Pole Display** tab

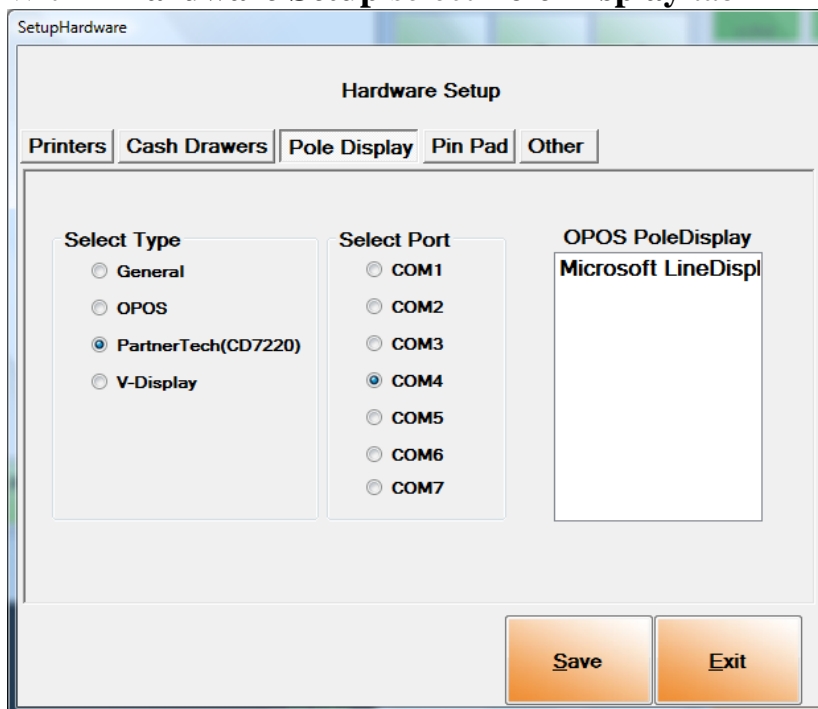

INTERNATIONAL POINT OF SALE

3. Select **PartnerTech(CD7220)** and make sure you have the appropriate Com Port **SAVE** then **Exit**