

Programming Your ID Tech Econoscan



This document will show you how to program your Tech Econoscan scanner to read barcodes the way they are formatted in your Corner Store POS database.

Most of your products have UPC-A barcodes that have 12 digits with 10 digits in the middle, one in the front and one at the end. Here's an example:



Other products have UPC-E barcodes that have 8 digits with 6 in the middle, one in the front (usually a zero) and one at the end. Here's an example:



Note: Before scanning any of these barcodes it is important to know how your scanner is programmed. In order to do this, first open up Windows Notepad and scan the barcode of an item with a UPC-A barcode and another item with a UPC-E barcode. Second, open Corner Store POS and see how the items are actually entered in by scanning the same item in the search field. Once you have completed this step you will know what needs to be done with the scanner. For example, in Corner Store your UPC-A items might have only the middle ten digits, so you'll want to remove first digit and last digit of UPC-A.


All of these codes and more are found in the Tech Econoscan user manual found here:

http://www.idtechproducts.com/index.php?option=com_docman&task=cat_view&gid=376&Itemid=83

Reset to factory defaults (usually not necessary)



Carriage Return (simulates Enter key) - Use this if when you scan a barcode, you have to press enter to get the item # onto the invoice grid

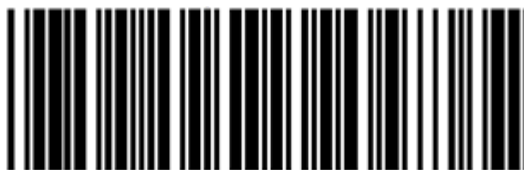


UPC-A


Transmit the first digit



Transmit the last digit

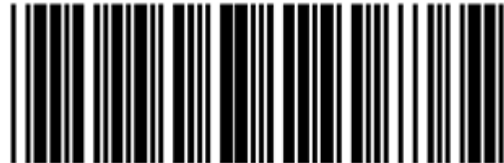

Remove the first digit

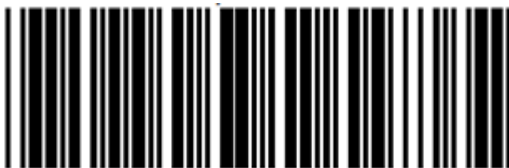


Remove the last digit



UPC-E


Transmit first digit

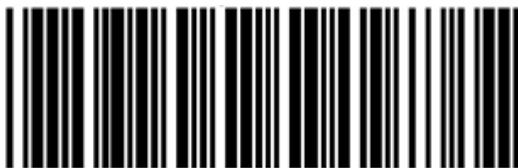

Transmit the last digit



Remove first digit

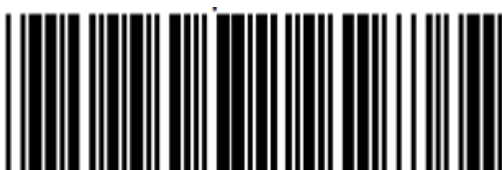

Remove the last digit

