

INTERNATIONAL POINT OF SALE

Honeywell/Metrologic 3780 Scanning Guide



This guide will go over how to set up the MS 3780 Scanner with CornerStore

The MS 3780 scanner requires no drivers or installation and can be used for CornerStore, however if you already have items in your database, then the format of the codes may be different. The default for the scanner is to read 8 digits on the UPC-E codes, and 12 digits on the UPC-A codes.

Check the barcode to the item number in the database to see how you need to configure the scanner. UPC-E codes can read 6 to 8 digits. Whereas UPC-A codes can read 10-12 digits.

UPC-E



UPC-A



To configure the scanner, all you need to do is to scan the barcodes below based on your need.

Restore Defaults



UPC-E codes

Read the First Digit



Do Not Read the First Digit



Read the Last Digit



Do Not Read the Last digit



UPC-A codes

Read the first digit



Do not read the first digit



Read the last digit



Do Not Read the Last Digit

