

INTERNATIONAL POINT OF SALE



The UniTech MS320 wireless scanner is compatible with CornerStore and any non-wireless computer. This document will show you how to program your UniTech MS320 scanner to read barcodes the way they are formatted in your Corner Store POS database.


Setting up MS320 stand

There are 4 items for your scanner stand:

- 1) The Base



- 2) The Pole

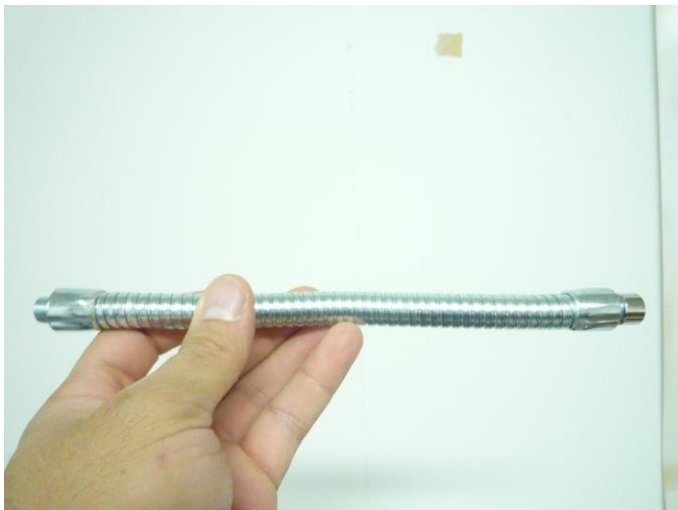

International Point of Sale: CornerStore POS

- On one end the pole is like this



- On the other end it is like this. It has this piece which you will take off to use later.



3) The scanner handle



4) The plastic cover for the pole



International Point of Sale: CornerStore POS

First you want to use the plastic cover on the pole



Screw the end with nothing attached on it onto the scanner handle



International Point of Sale: CornerStore POS


Then put the end that had the piece attached through the hole on the base, and attach that piece back to the pole. Tighten as much as possible so the scanner stand can be stable.

Configuring Barcode Scanner

This barcode is the **program barcode**



This barcode is to **reset** your barcode scanner

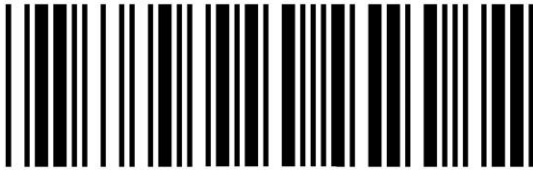

To reset, scan program barcode first, then scan the reset barcode

UPC A

Drop first digit

Scan program barcode first then scan following barcodes in this order

Truncate leading



0



1




International Point of Sale: CornerStore POS

Finish



Exit

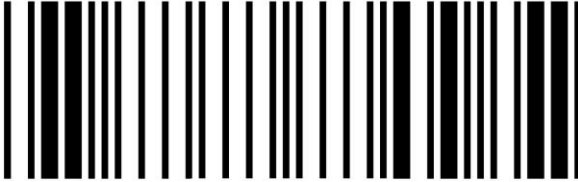

Drop last digit

Scan program barcode first then scan following barcodes in this order

Check sum transmission



0(scan two times)




Finish



International Point of Sale: CornerStore POS

Exit

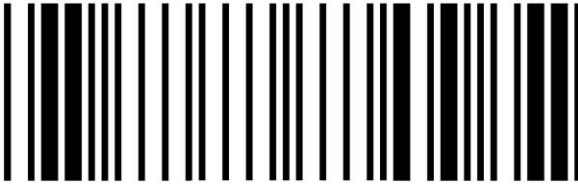

UPC E

Drop first digit

Scan program barcode first then scan following barcodes in this order

Truncate leading



0



1




Finish



International Point of Sale: CornerStore POS

Exit

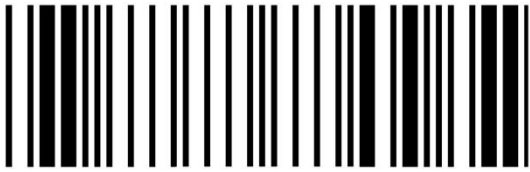

Drop last digit

Scan program barcode first then scan following barcodes in this order

Check-Sum Transmission



0



Scan twice

Finish



Exit

