# INTERNATIONAL POINT OF SALE

Installation instructions for the PD3000, PD3900, LD9000, and LD9900 Serial pole displays with Corner Store POS



Corner Store POS supports Logic Control Pole Display. This document will detail the process of installing the correct drivers and then setting up in Corner Store POS.

## **Installing Appropriate Drivers**

#### **NOTE:** Please leave Pole Display disconnected for driver installation!

 The Logic Control PD USB driver can be downloaded at: For Windows XP/VISTA:

http://cornerstorepos.com/downloads/hardware/LC USB Display Windows Driver XP VISTA.zi p

For Windows 7

http://cornerstorepos.com/downloads/hardware/LC USB Display Windows Driver 7.zip

2. Unzip the folder and double click on <u>lcild\_v207230</u> to begin the installation of drivers.

🔾 🗢 📕 🕨 Logic_C	Control ► LD_DRIVER_WIN7 ► V2.0.7.230			✓  Sear	ch V2.0.7.230		
)rganize 🔻 Extract a	Il files						
🔆 Favorites	Name	Туре	Compressed size	Password Size		Ratio	Date r
📃 Desktop	🚳 install	Windows Batch File	1 KB	No	1 KB	0%	7/21/2
🐌 Downloads	🔂 lcild_v207230	Windows Installer Package	326 KB	No	504 KB	36%	7/21/2
📃 Recent Places	📄 readme	Text Document	3 KB	No	11 KB	80%	3/23/2
<ul> <li>Documents</li> <li>Music</li> <li>Pictures</li> <li>Videos</li> <li>Computer</li> <li>eMachines (C:)</li> <li>Network</li> </ul>							
	•						

3. When prompted select Run.


Open File - Security Warning			
Do you want to run this file?			
1¢	Name:DRIVER_WIN7.zip\V2.0.7.230\lciId_v207230.msi Publisher: Logic Controls, INC. Type: Windows Installer Package From: C:\Users\intlpos\AppData\Local\Temp\Temp1_LD Run Cancel		
۲	While files from the Internet can be useful, this file type can potentially harm your computer. Only run software from publishers you trust. What's the risk?		

4. Select **Next** to begin installing Line display USB Drivers on your computer.



3 1-866-468-5767 or 201-928-0222

5. Select **Install** when it asks to install this device software.

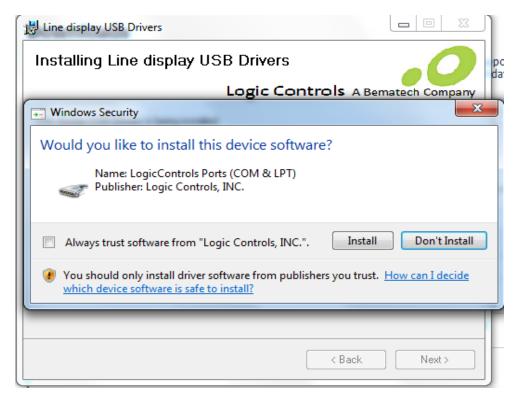

6. Select **Close** to complete the installation.

提 Line display USB Drivers		
Installation Complete		.0
	Logic Control	S A Bematech Company
Line display USB Drivers has been succe	essfully installed.	
Click "Close" to exit.		
	Cancel <	Back Close

## Configure Logitech Serial Pole Display

Logitech Pole Display consists of:

1. Cable 1: The cable is connected with the Pole. It has 9 pins ports.



2. Cable 2: The cable with three ends.



The ends of cable 2,


Cable 2a: This is connected with power cable.



Cable 2b: This is connected with the serial port behind the CPU.



Cable 2c: This is connected with the Pole Display cable.

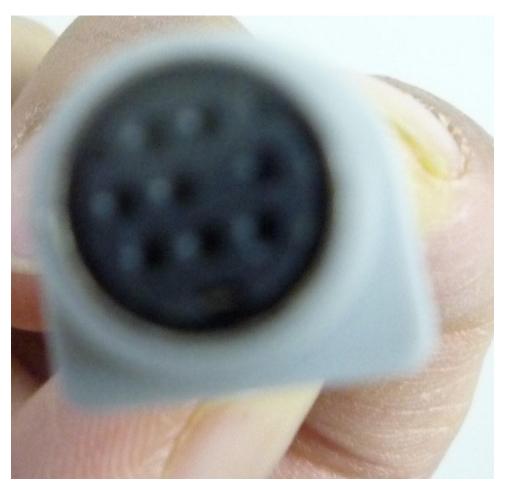


# 3. Power Cable:



The end of power cable,



The figure shows the connection between Pole Display Cable 1 and Cable 2c.

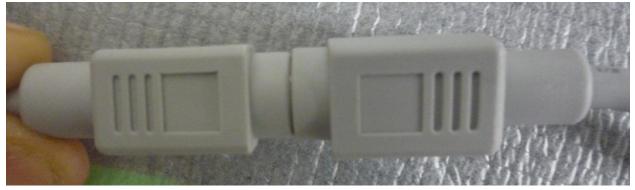

The figure shows the connection between **Cable 2a** and end of **power cable**.



The figure shows the picture of serial port at the back of CPU.







The figure show the connection of **power cable** with the **power supply**.




## Installing OPOS Drivers for Pole Display

1. The Logic Control PD OPOS driver can be downloaded at:

http://cornerstorepos.com/downloads/hardware/LC\_PD-OPOS.zip

2. When prompted, double click on setup.

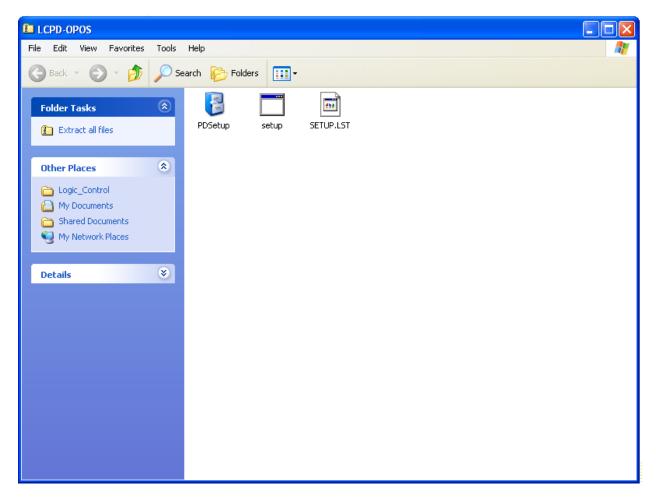

3. Select Run to begin the installation of OPOS drivers.

File Dow	File Download - Security Warning				
Do you want to run this file?					
	Name: setup.exe Publisher: <u>Logic Controls, INC.</u> Type: Application				
	Run Cancel				
:	While files from the Internet can be useful, this file type can potentially harm your computer. Only run software from publishers you trust. <u>What's the risk?</u>				

4. When prompted, select **OK**.

Logic Controls PD OPOS Version 2.6 Se	tup
	😼 Logic Controls PD OPOS Version 2.6 Setup
	Welcome to the Logic Controls PD OPOS Version 2.6 installation program. Setup cannot install system files or update shared files if they are in use. Before proceeding, we recommend that you close any applications you may be running.
	OK Exit Setup

5. Click on <u>icon</u> to begin the installation/setup of OPOS drivers. You can change the destination directory by selecting Change Directory option.

B Logic Controls PD OPOS Version 2.6 Setup	X			
Begin the installation by clicking the button below.				
Click this button to install Logic Controls PD OF Click here to begin setup fied destination directory.	OS Version 2.6 software to the			
Directory:				
C:\Program Files\Logic Controls PD OPOS\	<u>⊂</u> hange Directory			
E <u>×</u> it Setup				


6. Select **Continue** to complete the installation of OPOS drivers.

gic Controls PD OPOS Ve	rsion 2.6 Setu
🛃 Logic Controls PD OPOS Version 2.6 - Choose Pro 🔀	
Setup will add items to the group shown in the Program Group box. You can enter a new group name or select one from the Existing Groups list.	
Program Group: Logic Controls PD OPOS	
E <u>x</u> isting Groups: Accessories	
Dell Accessories Google Chrome Logic Controls PD OPOS Startup	

### Working with the USB Drivers (Only if USB)

#### Go to Start -> Right Click Computer and Click Manage

Click on **Device Manager** and click on **Ports**, then look for the **COM port** that was created from the installation. Remember this **COM port**.

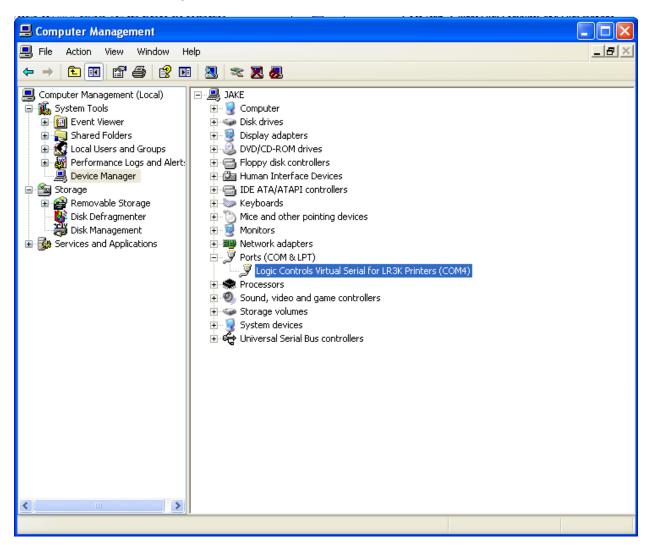


Open up the Logic Controls OPOS driver (Start -> All Programs -> Logic Controls PD OPOS -> Setup) Select the COM Port that was created.

🐺 logic contr	OLS OPOS SETUP		
Set Port: Baud Rate	<b>COM4</b>	Device Status: Display String: LC OPOS Test	
Device Name K	,	Open LDN LC-PD	
PD Font Type	Regular 💌 Unit1 💌	Claim Enable Device	
Ad	d New LDN	DisplayText DisplayTextAt Row: 1 Col: 2	
Re	ename LDN	ClearText	
Delete LDN Release Close			
Return Code			
Exit			

Click **Open**, then **Claim**, **Enable Device**, **Display Text**, **DisplayTexAt**; you should be able to see some test text on the display. Then click **Clear Text**, **Release**, then **Close**. Click **Exit**.

## Using Logic Control Pole Display with Corner Store POS

1. Open Corner Store POS>Set Up>Hardware Set up.

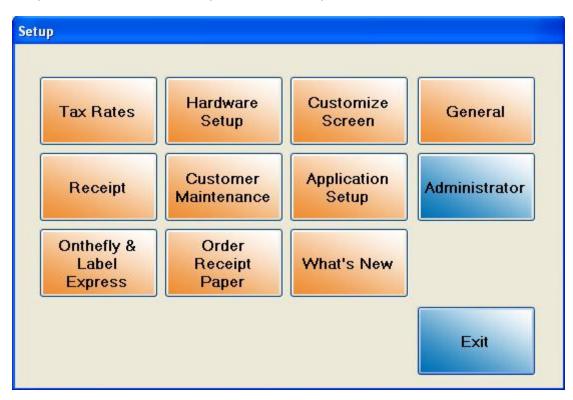

2. Within Hardware Setup select Pole Display tab.

3. Click OPOS if you are using a USB Pole Display, then select the LC-PD display. If you are using Serial then just select General and COM1.

SetupHardware					
Hardware Setup					
Printers	Printers Cash Drawers Pole Display Pin Pad Other				
Selec	ct Type	Select Port	OPOS PoleDisplay		
0	General	О сом1	LC-PD		
•	OPOS	О сом2			
0	PartnerTech(CD7220)	О сомз			
0	V-Display	О сом4			
		О сом5			
		О сомб			
		⊙ сом7			
]					
			Save & Exit		

- 4. Select Save & Exit.
- 5. To apply changes to take place closed Corner Store and re login.