

Unitech MS380 Bluetooth Scanner Guide



The unitech MS380 wireless scanner is compatible with cornerstore any any non-wireless computer.

The MS380 must be set up so the cradle creates a wireless signal for the scanner. In order to set up the cradle, you must plug in the power cord and the USB cord into the computer and the cradle. Make sure you hear the “snap” from the ethernet cord when you plug it into the cradle.

If you want to reset the scanner at any time, just scan the default code.

Default



Enabling Wireless Mode


Step 1: Turn on the scanner by pressing the trigger for at least 1 second. You should hear a beep.

Step 2: If the cradle’s wireless blue light is on. You do not need to continue. If the scanner is blinking red and blue please continue.


Step 3: Scan the ‘Disconnect’ code



Step 4: Scan the ‘Wireless mode’ code

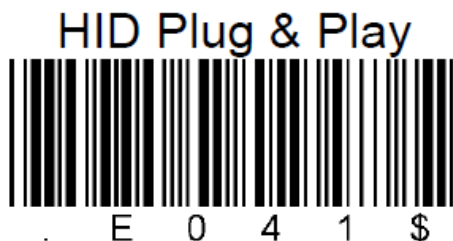

Step 5: Scan the 'Set Connection' code at the bottom of the cradle. The scanner should beep again and now the blue light will turn on.

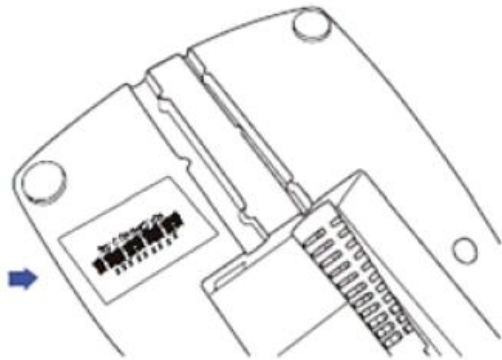

Programming the Scanner

The scanner automatically defaults to reading UPC-E codes at 8 digits, and UPC-A codes as 12 digits. In order to match your existing database, you must have the scanner read the proper amount of digits for the barcode.

UPC-E Codes

Read First Digit



Do Not Read First Digit



Read Last Digit



Do Not Read Last Digit



UPC-Codes

Read First Digit



Do Not Read First Digit



Read Last Digit



Do Not Read Last Digit

