

Programming Your ID Tech Econoscan II



This document will show you how to program your ID Tech Econoscan II scanner to read barcodes the way they are formatted in your Corner Store POS database.

Most of your products have UPC-A barcodes that have 12 digits with 10 digits in the middle, one in the front and one at the end. Here's an example:



Other products have UPC-E barcodes that have 8 digits with 6 in the middle, one in the front (usually a zero) and one at the end. Here's an example:



All of these codes and more are found in the ID Tech Econoscan II user manual found here:

http://www.idtechproducts.com/index.php?option=com_docman&task=cat_view&gid=435&Itemid=83


Reset to factory defaults (usually not necessary)




Before you program any configuration to your scanner you must first scan a "Start Configuration" barcode



After you have programmed the desired configuration to your scanner you must scan a "End of Configuration barcode

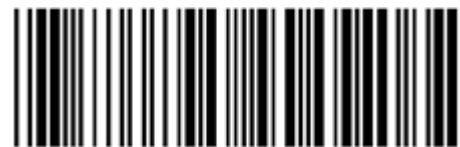

Carriage Return (simulates Enter key) - Use this if when you scan a barcode, you have to press enter to get the item # onto the invoice grid

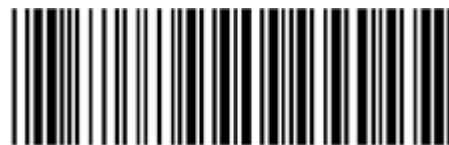

UPC-A

How to make it only output the 10 digits in the middle for a 12 digits UPC-A barcode

1. Scan Start of configuration




2. Remove the last digit



3. Remove the first digit



4. Validate action

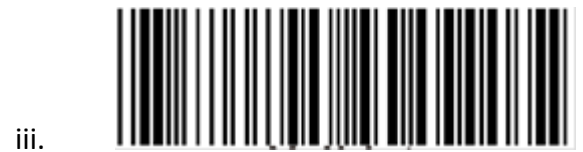

5. Scan End of Configuration



UPC-E

How to make it output the middle 6 digits for an 8 digits UPC-E barcode

1. Scan Start of configuration



2. Remove the last digit



3. Remove the first digit



4. Validate action



5. Scan End of Configuration

